



DELTA ELEVEN OY ASSEMBLY GUIDE



DELTA SET ASSEMBLY



PARTS INCLUDED



JULIET PLATE CARRIER ASSEMBLY




PARTS INCLUDED



ATTACHING SHOULDER STRAPS

Attaching shoulder straps

1. Attach the front and rear panels shoulder strap velcro
2. Pull the quick release cord through the hole on the front panels shoulder strap. If necessary fold the unused velcro underneath the shoulder strap

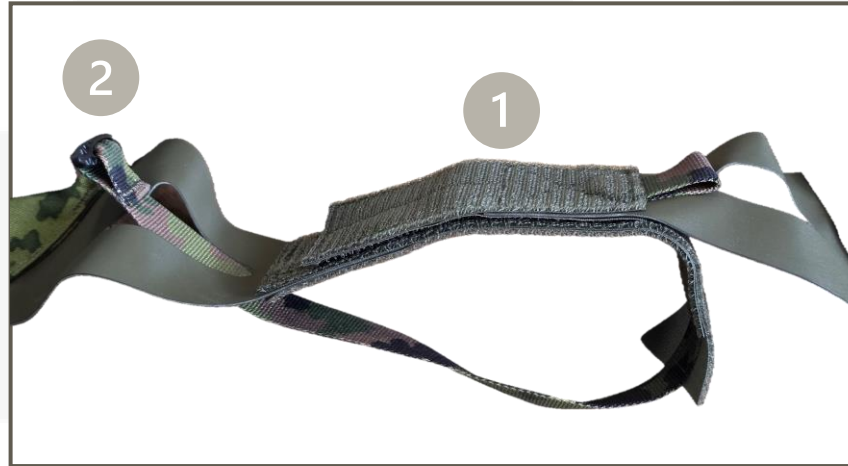

ATTACHING THE SHOULDER PADS

1. Wrap the shoulder pads around the shoulder strap

NOTE: make sure the cable management loops are on the outside of the shoulder strap



ATTACHING THE CUMMERBUNDS

1. Thread the cummerbunds through the hypalon flap and through the molle loops on the rear panel
2. User the included bungee cords to secure the cummerbunds to the rear panel
3. Adjust the lenght and tightness of the bungee cord according to your liking

NOTE: the looser the bungee, the more flex is introduced to the cummerbunds



ATTACHING THE PLACARD CLIPS

1. Retrieve the webbing loop hidden in the top corner of the front panel
2. Loop the clip trough the webbing loop (this is finicky, but doable)
3. Thread the clip through the protective molle loop

NOTE: This clip is only needed for third party placards, and this install is optional



ATTACHING THE D11 PLACKARD

1. Open the velcro pocket on the front of the Juliet Plate Carrier
2. Thread the D11 Placard's velcro tabs through the molle loops above the pocket.
3. Pull the tabs down and attach them to the velcro inside the pocket

NOTE: leave 10mm of relief on the velcro tabs to allow for the movement of the D11 Placard



ATTACHING THE D11 SIDE ARMOR POUCHES

1. Fasten the D11 Side Armor pouch to the velcro on the cummerbund at a suitable location to ensure maximum coverage
2. Thread the straps through the molle on the cummerbund and snap the buttons together



ATTACHING THE D11 DANGLER POUCH

1. Open the plate flap on the front panel of the Juliet Plate Carrier
2. Insert the velcro flap of the D11 Dangler Pouch at a suitable height. Make sure the pouch is centered




INSTALLING THE D11 SOFT SIDE PLATES

1. Open the D11 Side Armor Pouch
2. Insert the D11 Soft Side Plate
3. Thread the velcro around the D11 Soft Side Plate to keep it securely in place
4. Close the D11 Side Armor Pouch



INSTALLING THE D11 HARD PLATE III+

1. Open the plate flap on the Juliet Plate Carrier
2. Insert the D11 Hard Plate III+, making sure it goes all the way inside the plate compartment
3. Close the plate flap so that it securely holds the plate in place

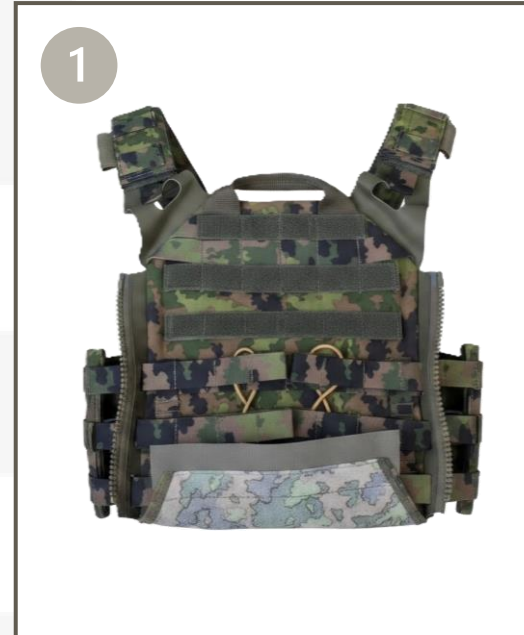


ASSEMBLY COMPLETE.



D11 HIGH CUT HELMET SETUP



PARTS INCLUDED

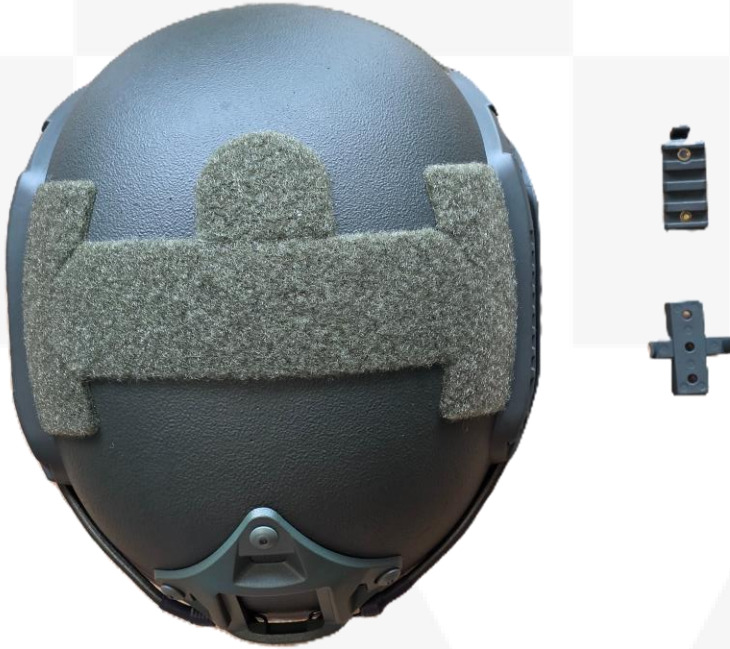

ADJUSTING THE RETENTION STRAP

The retention strap has two lengths: Long and short. The helmet is shipped with the long setting as default.

Adjusting the retention strap length

1. Remove the black screw on the ARC rail, and remove the mounting point for the retention strap
2. Move the locking nut to the desired setting and reattach the screw

NOTE: on the front two retention straps, remember to attach the mounting point for the adjustment wire between the helmet shell and the retention strap

1



2



ADJUSTING THE PADDING

1. Align the green padding along the outer edge of the helmet shell – the closer to the edge the more even the fit will be
2. Adjust the placement of the black padding according to your head shape

TIP: actively test fit the helmet to recognize any hotspots while wearing, you should be able to wear the helmet for the duration of a work day without discomfort.



ASSEMBLY COMPLETE.



ALL DONE. STAY FROSTY.

